

# FLEUR LINE







SF100-SF150

ASSEMBLY MANUAL

MONTÁŽNÍ NÁVOD



# CAUTIONS

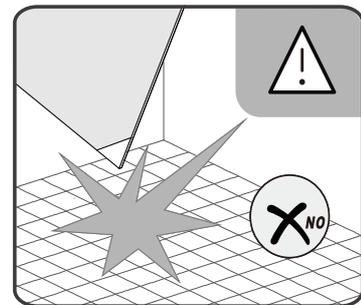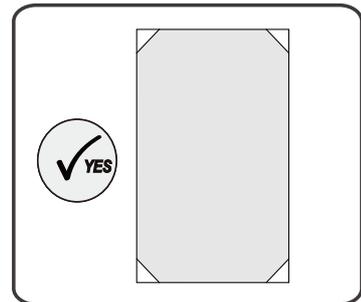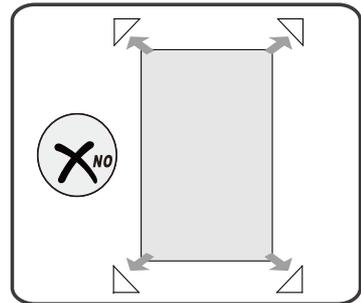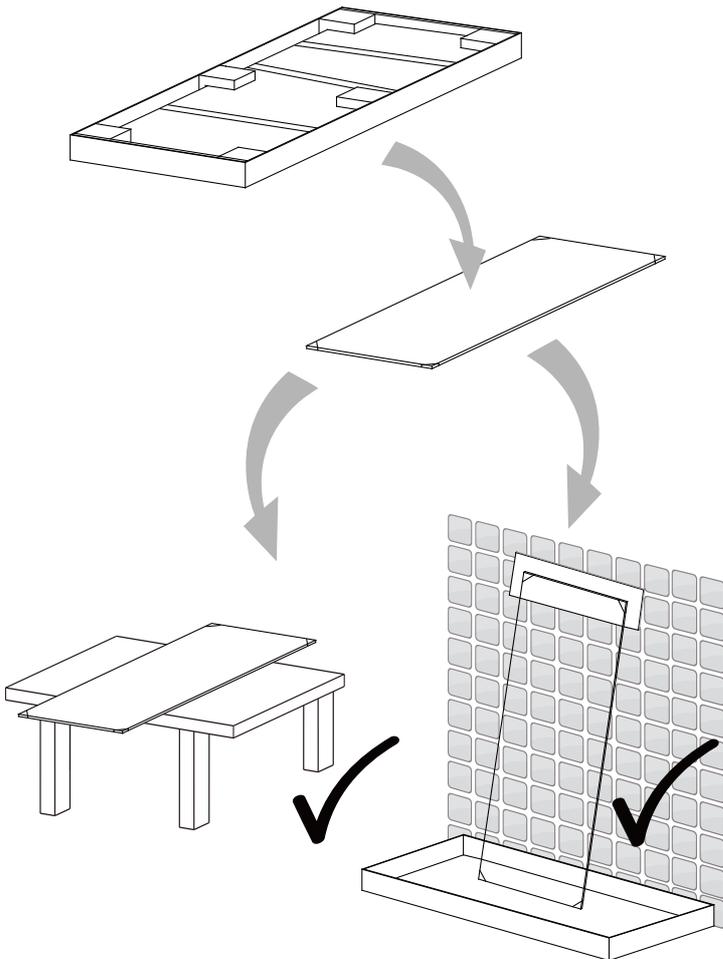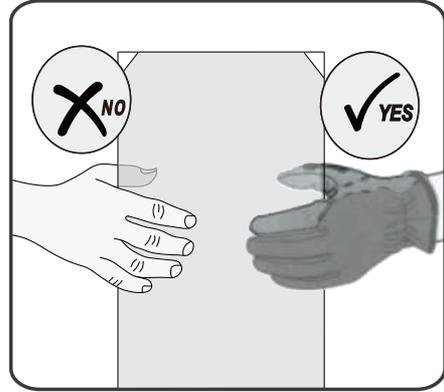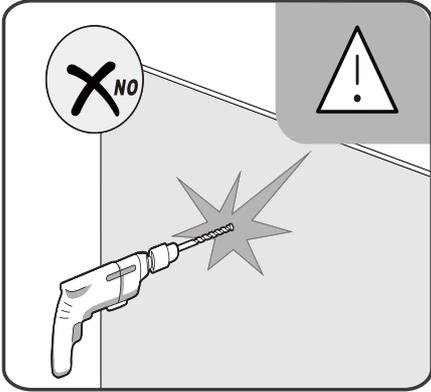

## TOOLS REQUIRED




PENCIL



( $\varnothing 6$   $\varnothing 3.2$ )  
DRILL BIT



SILICONE & GUN




FLAT HEAD & CROSS  
HEAD SCREWDRIVER




TAPE MEASURE



SPIRIT LEVE



DRILL




RUBBER HAMMER


## PACKING LIST

<p><b>A</b> B-702</p> <p>X2</p>	<p><b>B</b> B-823</p> <p>X2</p>	<p><b>C</b> C-022</p> <p>X1</p>	<p><b>D</b> D-068</p> <p>up X2</p>	<p><b>E</b> D-069</p> <p>down X2</p>
<p><b>F</b> I-974</p> <p>L/R X2</p>	<p><b>G</b> I-1084</p> <p>L/R X2</p>	<p><b>H</b> C-330</p> <p>X2</p>	<p><b>I</b> C-294</p> <p>X1</p>	<p><b>J</b> ST4*40</p> <p>X8</p>
<p><b>K</b> I-432</p> <p>X8</p>	<p><b>L</b> C-333</p> <p>8mm X1</p>	<p><b>M</b> C-335</p> <p>12mm short X1</p>	<p><b>N</b> E-029</p> <p>X1</p>	<p><b>O</b> I-948</p> <p>X4</p>
<p><b>P</b> C-335</p> <p>12mm long X1</p>	<p><b>Q</b> I-942</p> <p>X4</p>			


# PRODUCT SCHEMATIC DIAGRAM

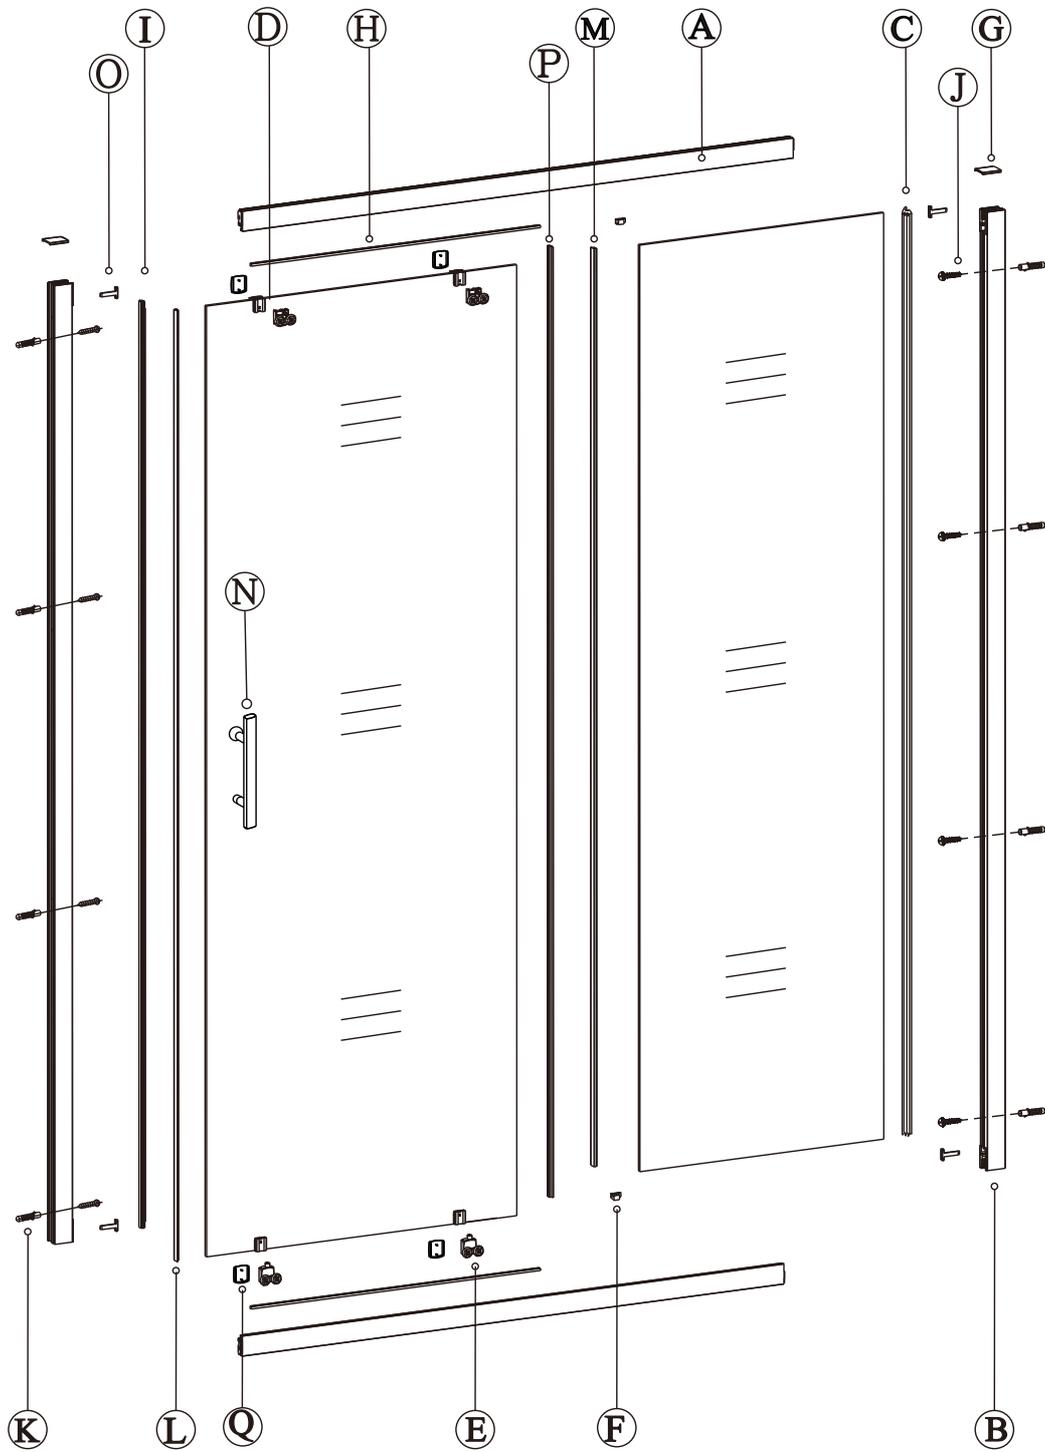

1

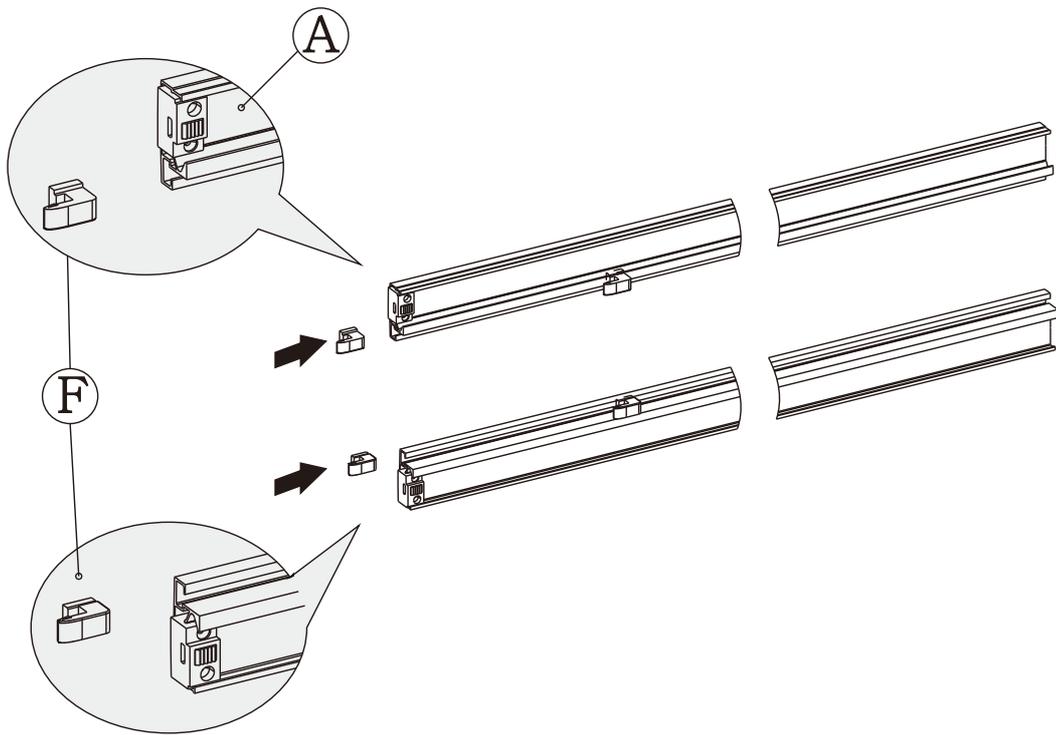


2

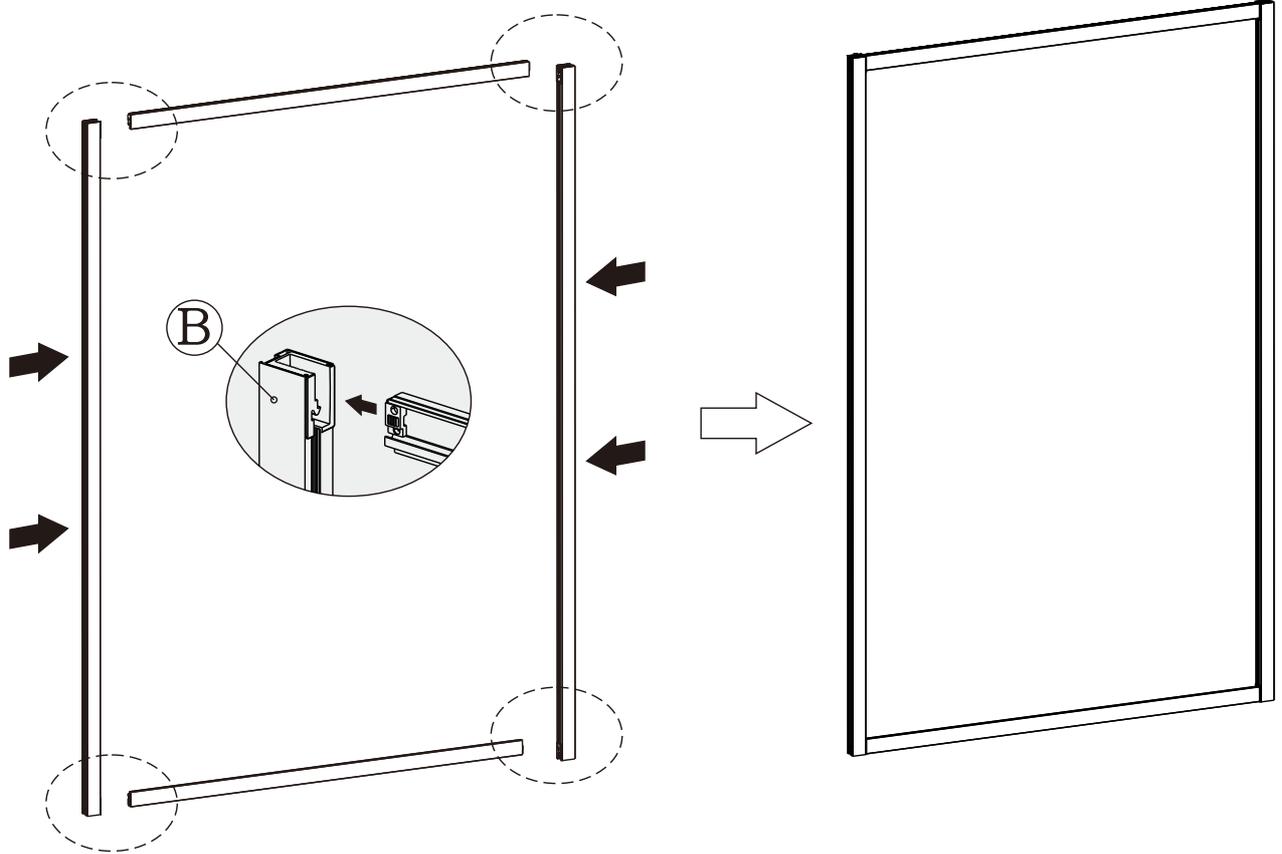


(3)


3

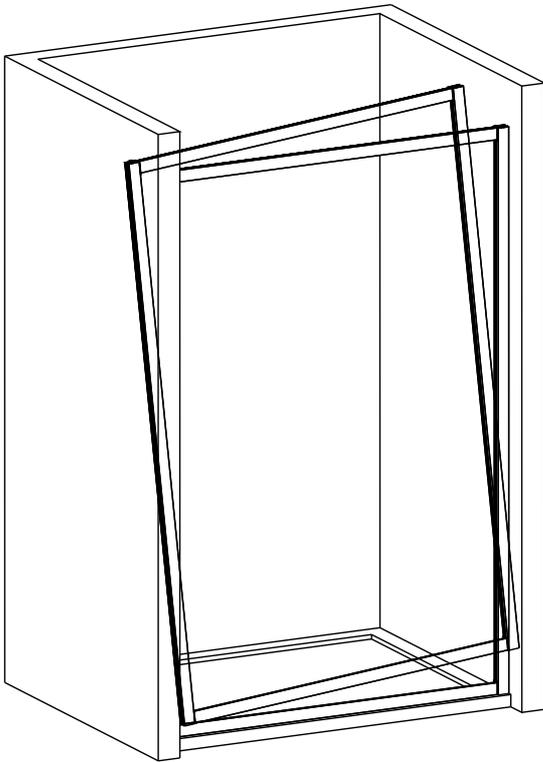


4

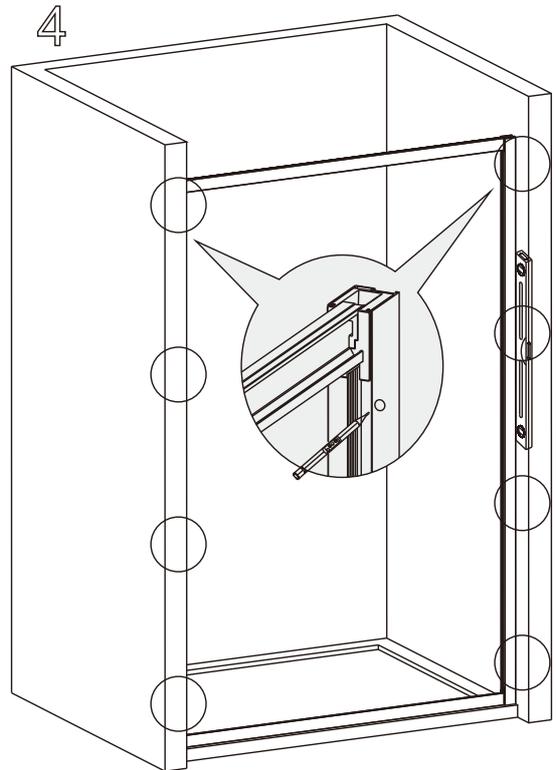

5

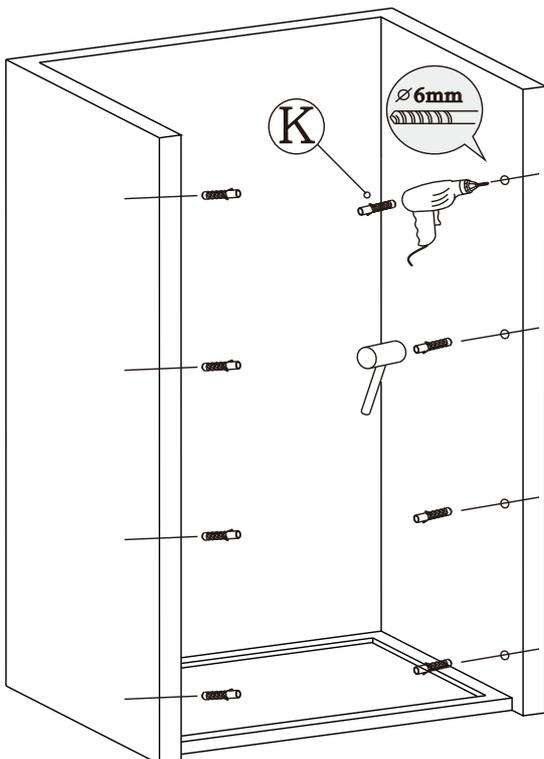


6

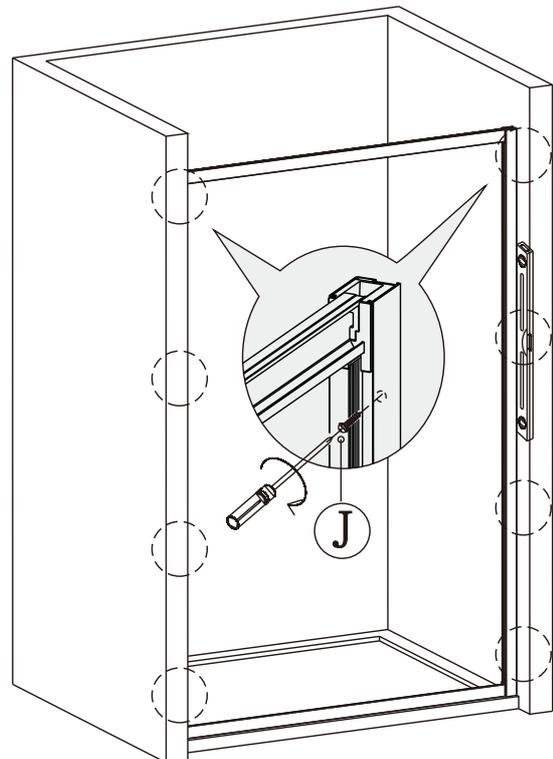


(4)


7

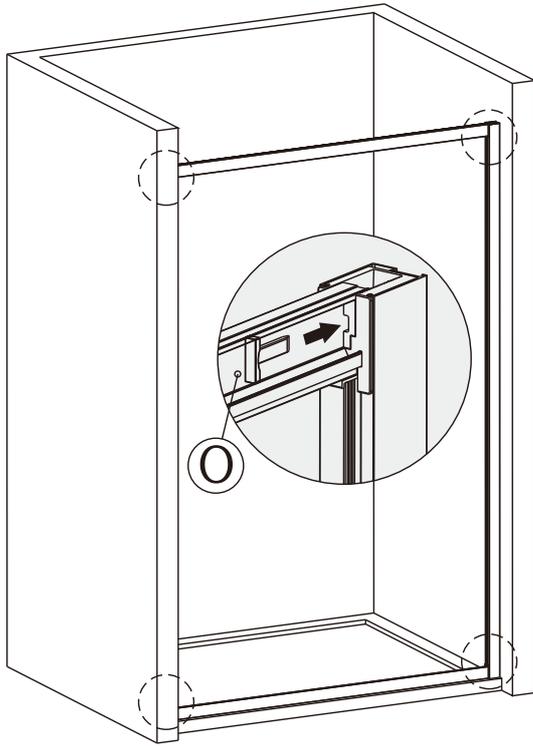

8

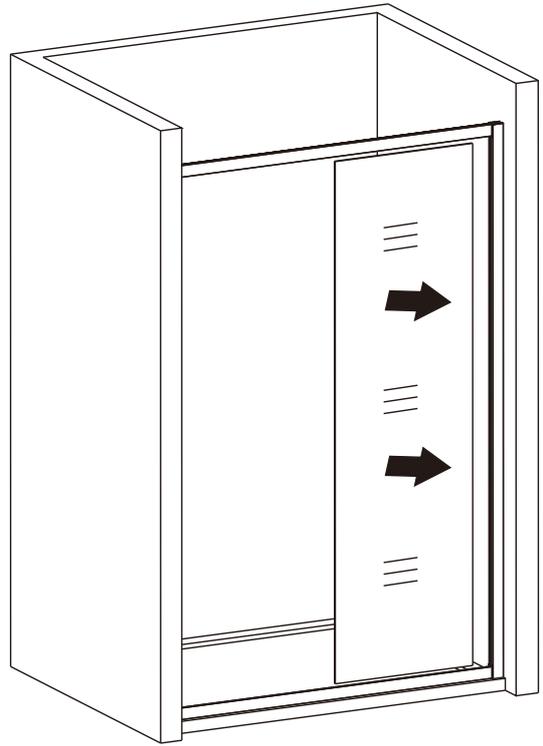


9

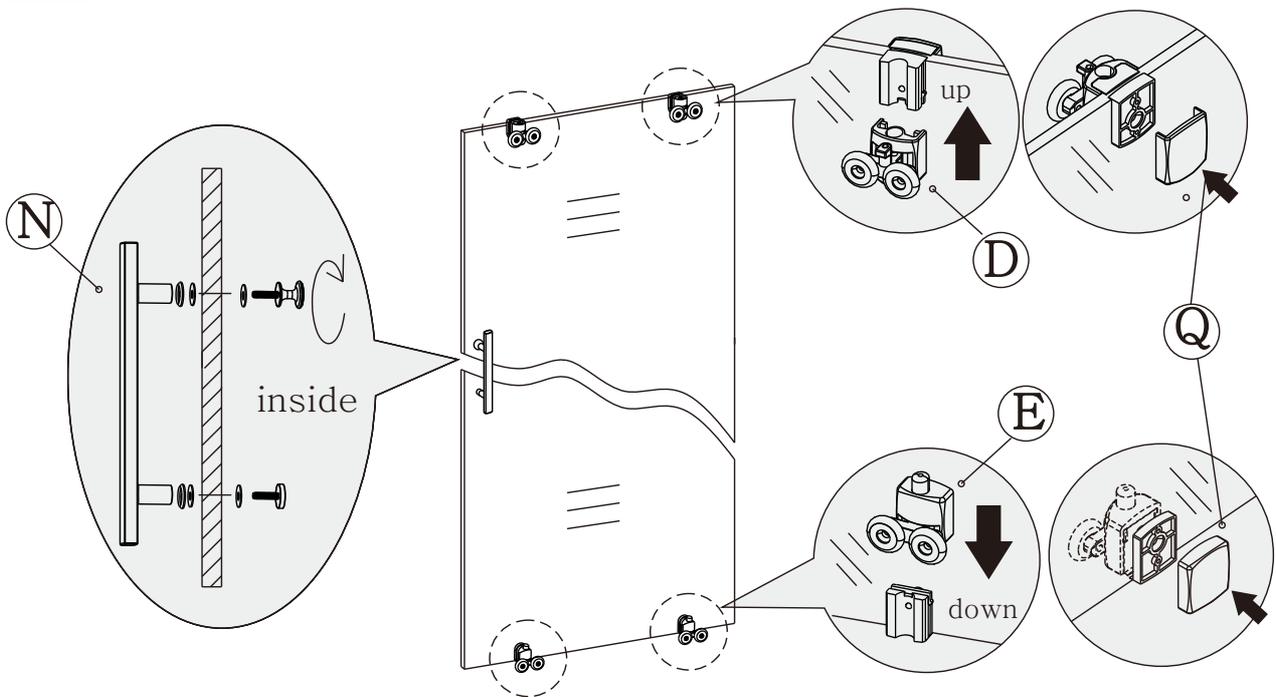


(5)

10

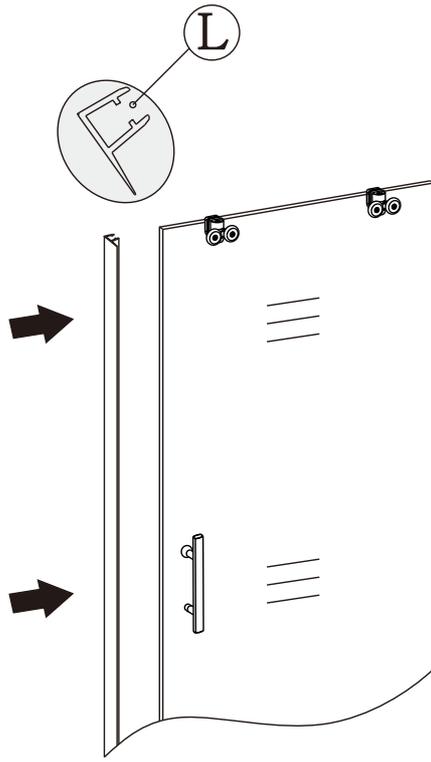


11

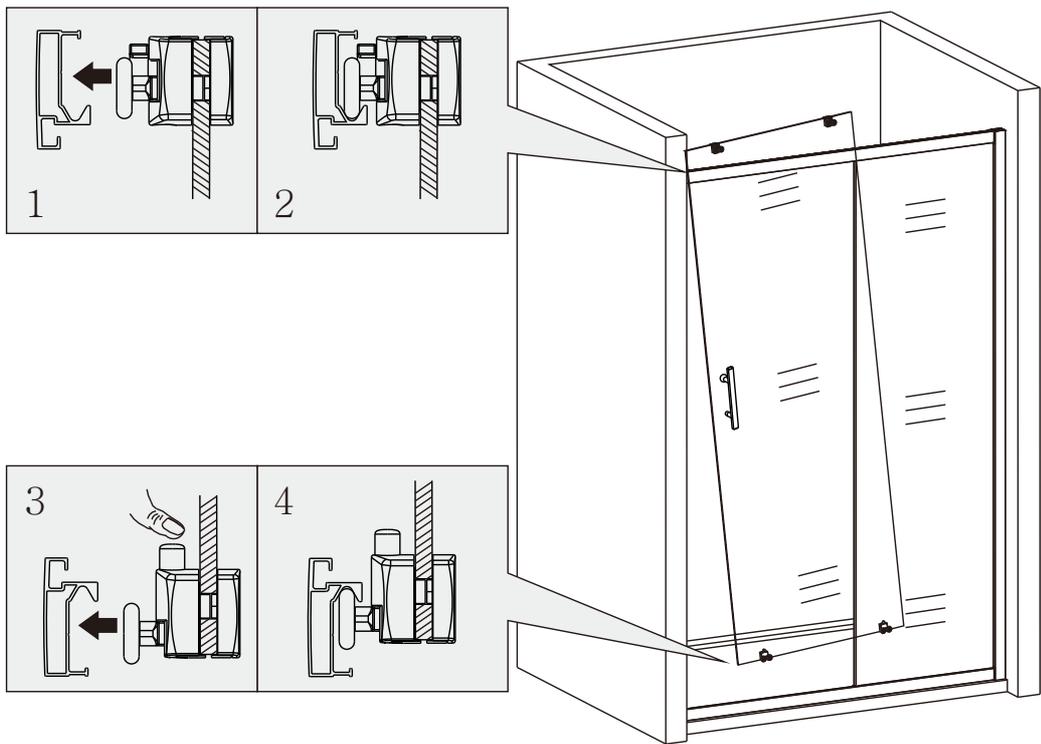


(6)

12

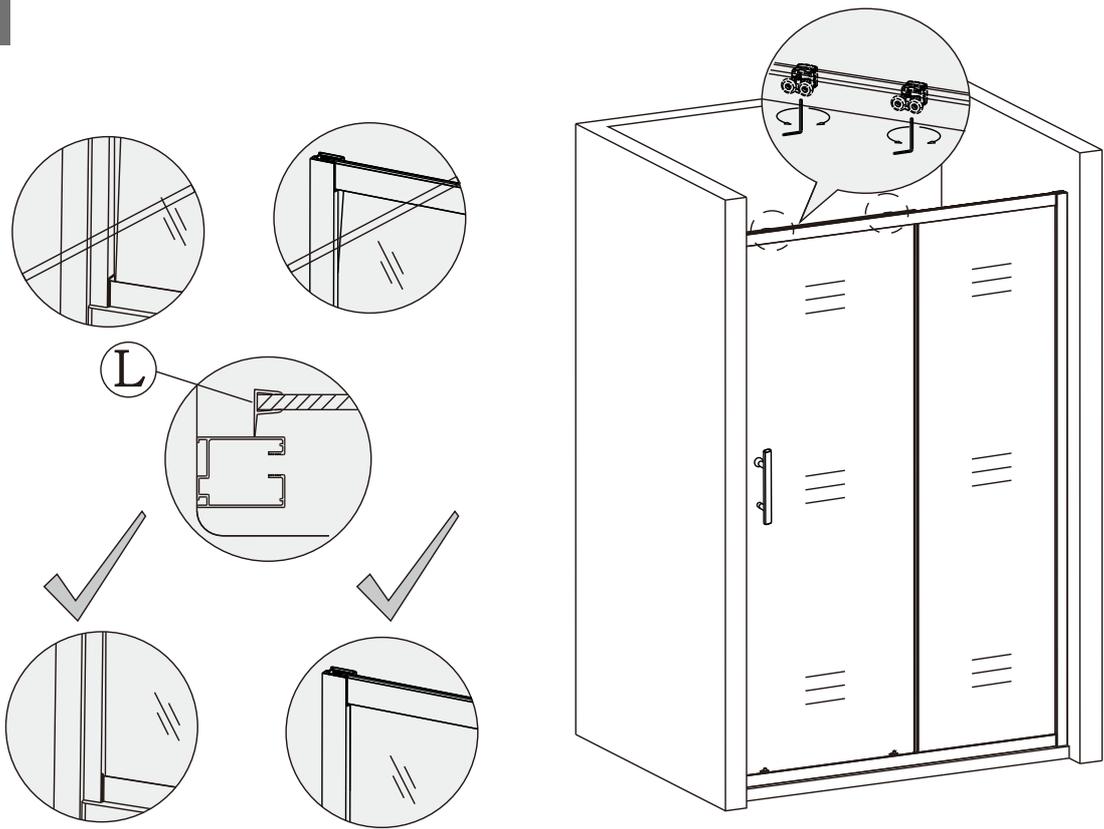


13

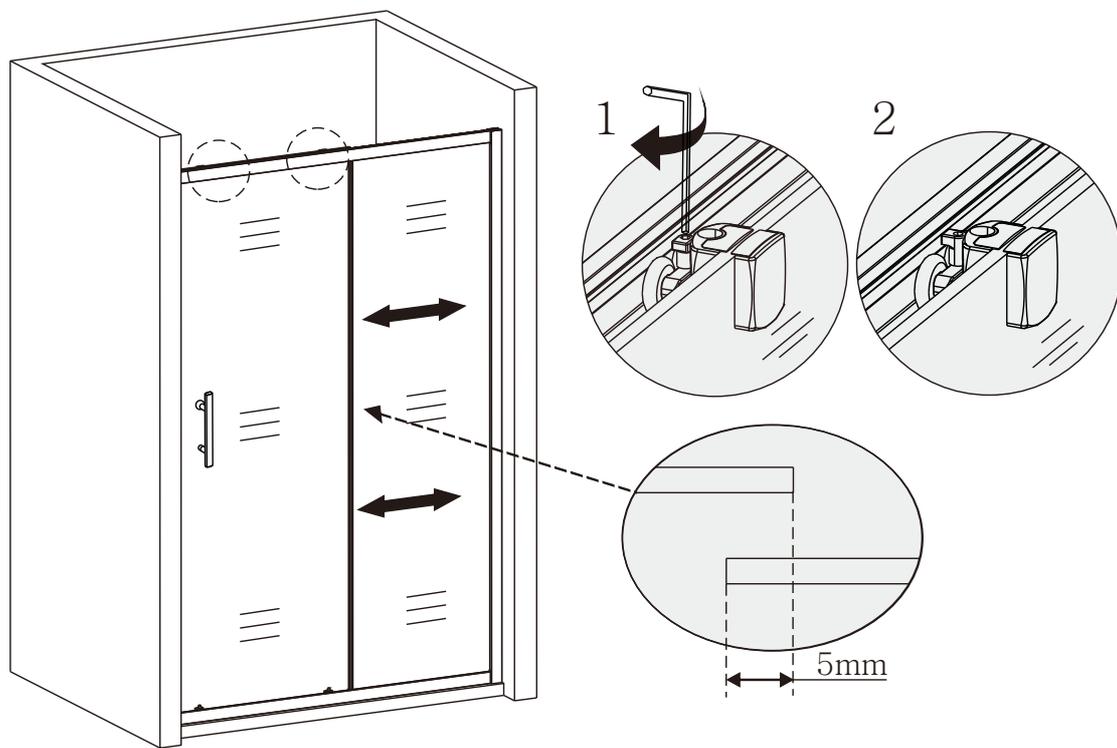


(7)

14

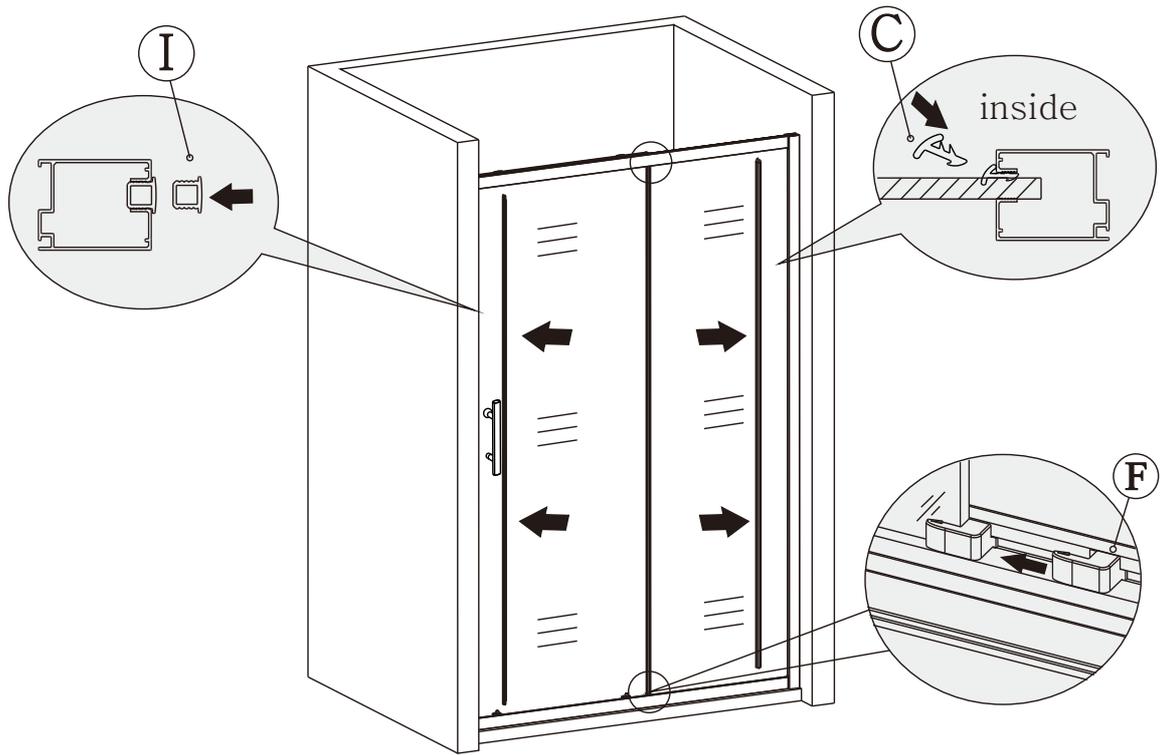


15

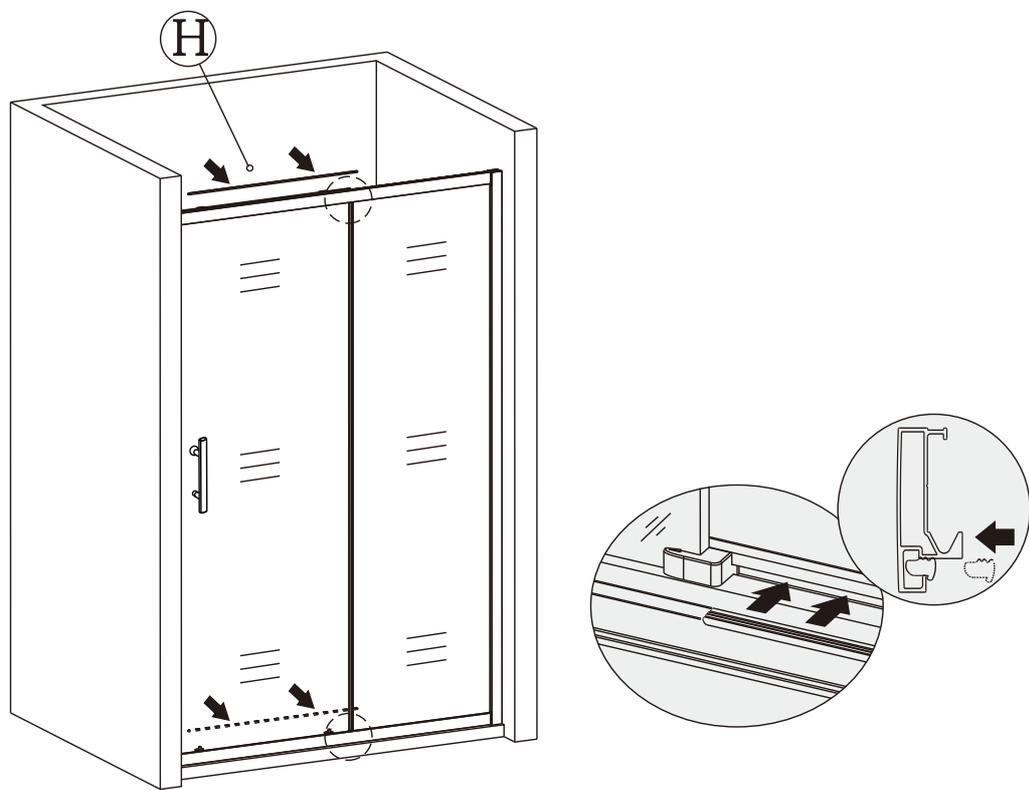


(8)

16

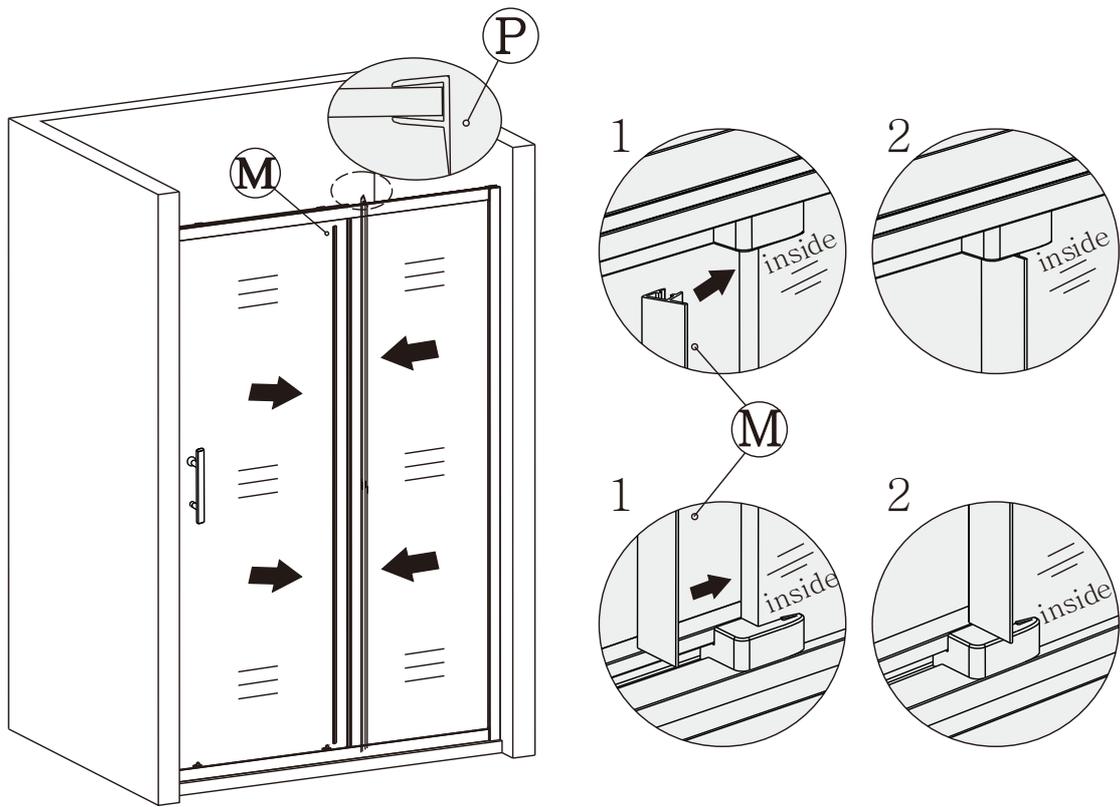


17

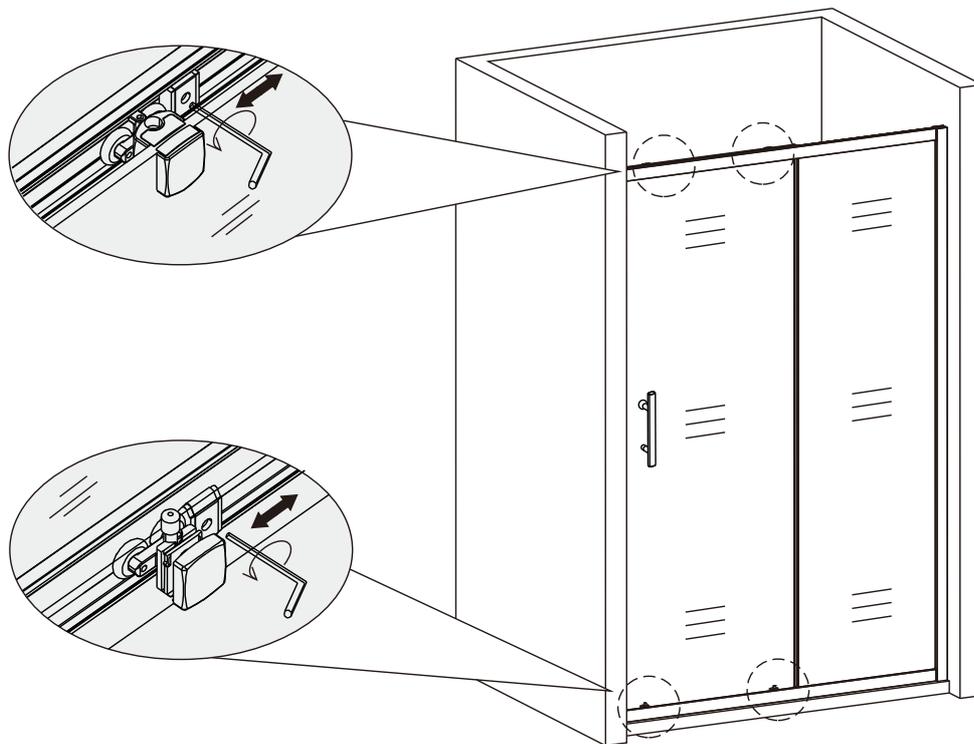

(9)

18

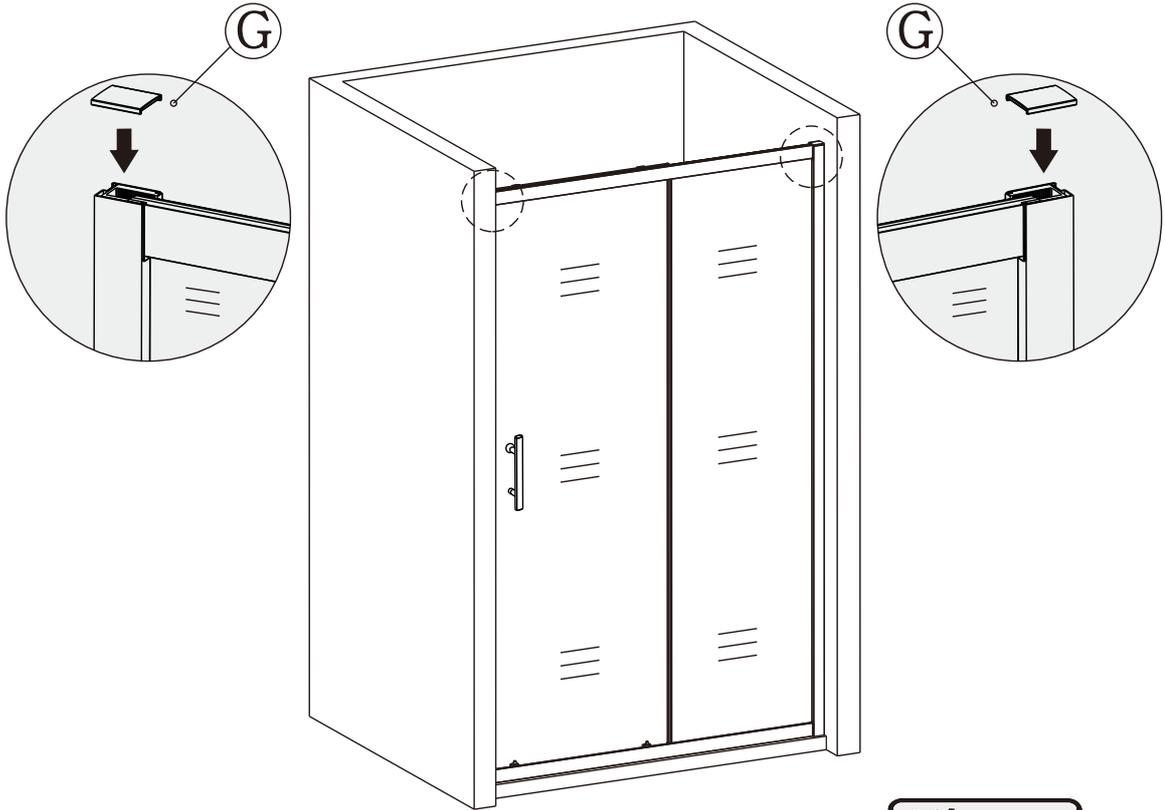

19



Apply some silicone on the outside edge of the shower enclosure (between the wall profiles and wall and between the frame and the tray) to enhance waterproof. After installation, it needs 24hours for silicone to dry before being put into use.

## Cleaning & maintenance

Clean the sundries regularly to prevent the drain from being jammed. Usually, clean the shower enclosure by mop with mild detergent.

Don't clean the shower enclosure with irritant detergent, such as alcohol, gasoline or other chemical cleaner.

Should there be any dirty stains on the shower enclosure, you may clean it by calico with toothpaste, but you need to clean it with water afterwards.

After the installation is completed, if you find there is much noise when the glass door moves, you may add small quantity of lubricant onto the roller wheel, slipping hook and the track.